



TABLE OF CONTENTS	
Important Safety Information	2
Introduction	3
Overview	4
Specifications	5
Controls and Features	6
Operating Instructions	7
Auto Shut-off Safety Feature	10
Install the Quirky App	11
Using Alexa	17
Using Google Home	19
Cleaning	23
Descaling the Coffee Maker	23
Troubleshooting	24
FCC Statement	25
RF Warning Statement	25
Warranty	26

WARNING: Risk of Fire or Electric Shock. Do not remove the bottom cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.

Pictures in the manual are for reference only. Please refer to the actual product.

IMPORTANT SAFETY INFORMATION	
SAVE THESE INSTRUCTIONS	
When using your Roast, basic safety precautions should always be followed. Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Quirky Roast is designed only for home use and domestic commercial applications such as small offices, restaurants, and hotels. Neither Quirky nor its affiliates are responsible for damage resulting from improper use or for damages caused by non-compliance with the information, warnings, and instructions provided in this manual. Please keep this manual in a safe place for future reference.	
• Do not use appliance on wet or hot surfaces, or near an open flame or heat source.	
• To protect against electric shock, do not immerse any part of appliance, power cord, or plug in water or other liquid. Unplug from outlet when not in use and before cleaning.	
• To disconnect, unplug the power cord from the electrical outlet only. Do not disconnect by pulling on the cord.	
• Do not operate appliance with a damaged power cord or plug. Do not operate appliance if it malfunctions or is in any way damaged.	
• Use appliance only for its intended use.	
• Closely supervise children when using an electrical appliance. Do not allow appliance to be used as a toy.	
• The appliance has a polarized plug (one blade is wider than the other). To reduce risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way. Do not force the plug into the outlet.	
CAUTION: A short power cord is provided to reduce risks from entanglement or tripping over a longer cord. An extension cord may be used when marked electrical rating is no less than the electrical rating of this appliance in the SPECIFICATIONS section of this manual. All cords should not drape over counters or tables where cords can be tripped over, or pulled on unintentionally, especially by children.	
• Do not place on or near a hot gas or electric burner, or heated oven. Extreme caution must be used when moving.	
! Please read this manual carefully and retain for future reference.	2

SAVE THESE INSTRUCTIONS	
products containing hot liquids.	
• Only use fresh (potable) and cold (moderate) water. Do not use water contained in bathtubs, wash basins or other containers.	
• Never touch the hot parts of the appliance, including the warming plate. Only handle the plastic parts of the appliance and the coffee pot by its handle.	
• Be careful not to get burned by steam evaporating from the coffee filter.	
• Never use the appliance if the pot shows any signs of cracks. Only use the pot that comes with this appliance.	
• Handle the coffee pot with care, as glass is fragile.	
• Never use your coffee machine without water in it. If you have a programmable coffee machine, make sure to fill it with water before programming it.	
• Never place the empty (or almost empty) coffee pot on the hot plate when the coffee machine is running. Also keep from other hot surfaces to prevent the pot from cracking.	
WARNING: Quirky Roast is not intended for use by children. It is not a toy! Do not allow children to play with any part of the appliance. Keep children away from the power cord; they can pull the unit down and be burned by hot water or become entangled in the power cord. Keep the coffee maker, the heated base, and the cord out of the reach of children at all times.	
WARNING: This appliance operates at very high temperatures. There could be danger of scalding from escaping water or steam. Do not touch any part of the coffee maker except the stay cool handle when the appliance is in use.	
WARNING: Position the lid so that steam is directed away from the handle.	
WARNING: Ensure that Quirky Roast is switched off before removing the coffee maker from the base.	
WARNING: There is potential injury from misuse of this product.	
! Please read this manual carefully and retain for future reference.	3

SPECIFICATIONS	
RATED VOLTAGE	120V
POWER	1000W
HEATING METHOD	UNDERBURN HEATING
HEATING TYPE	THERMAL
COFFEE POT MATERIAL	GLASS
PROTECTION	AUTO SHUT-OFF
CAPACITY	15 CUPS / 1.8 LITERS
FCC ID	2A4N2ROAST

INTRODUCTION	
Thank you for purchasing the Quirky Roast Smart Coffee Maker! Ever with you could make a pot of coffee from your bed on a lazy Sunday morning! Now you can!	
The Roast, the WiFi smart coffee maker allows you to control it with the sound of your voice or a touch of your smart phone, control it with the sound of your voice or a touch of your phone.	

OVERVIEW	
Lid	
LED Display	
Touch Controls	
Coffee Pot	
Handle	
Heating/Power Base	
Water Level Gauge	
Filter	
Funnel	
Water Tank	

CONTROLS AND FEATURES	
The control panel consists of power button, timer, program, and mode control.	
Current / Programmed Time Display	Hour Setting
Run	Auto
On/Off	Prog
Power On/Off	Minute Setting
Program Button/ Time Buttons/ Timer Setting	

First Use Cleaning Instructions	
Ensure the Roast is clean and all packaging has been removed from inside and outside the product. Before using the Roast for the first time, clean it by running through a cleaning cycle.	
1. Fill the coffee maker with cold, clean water to the fill line.	
2. Place the filter into the machine (without adding coffee), and close the lid.	
3. Place the coffee pot on the heating base.	
4. Connect to power source.	
5. Press any button, 1200 will appear on your display.	
6. Press the Power Button once. The red LED indicator will turn on. After heating, the water will run through the Roast into the coffee pot.	
7. Press PROG button one time, LED displays "SET TIME". It means you can set the real time. Press HOUR and MIN buttons to set the time you want. After setting auto program. If you release the buttons for 8 sec, it will come back to clock display automatically.	
8. Press PROG button twice, the LCD displays "SET TIMER". It means you can set the auto program coffee making. Also use HOUR and MIN to set the timer. When the time you have set arrived, Coffee maker will switch on automatically and start brewing.	

9. Press ON/OFF button, the red indicator will light up. That means the automatic brewing function has started. When the time you have set arrived, the green light turns up and red indicator turns off. The coffee maker starts working.
10. If you want to make coffee immediately, just press ON/OFF button two times. The green indicator lights up and the appliance will operate. Press the ON/OFF button once again, the green indicator turns off, the coffee maker stops working.
11. After boiling, when no water in tank but you keep switch on and the carafe on heating plate, this will remain the coffee or tea warm. The water in carafe can be warm at a above 75 °C in half an hour. B. above 70 °C in an hour.

What Type of Water Should You Use?	
We recommend the use of filtered water for the Roast.	
Using filtered water not only gives you the best taste, it prevents scaling from building up in your coffee maker and calcifying the coffee maker.	
How Much Coffee Should You Use?	
The general rule for coffee is that 2 tablespoons of ground coffee should be used for every 6 ounces of water. This amount can be adjusted to suit personal tastes.	

OPERATING INSTRUCTIONS	
1. Place the Roast on a firm and level surface.	
2. Pour the desired amount of clean water into the coffee maker through the water tank.	
! ALWAYS PAY ATTENTION TO MIN / MAX WATER LEVELS AND ENSURE THE LID IS PROPERLY AND FIRMLY CLOSED. !	
3. Place a coffee filter into the plastic filter and fill with coffee grounds.	
4. Ensure the plastic filter is aligned properly in the Roast. Close the lid.	
5. Connect the Roast to a power supply. The display will show "1200" when it is ready to use.	
6. Place the coffee pot on the warming plate, ensuring that it is aligned to the tip of the funnel.	
7. Press power button once. The red indicator light will turn on and coffee will begin brewing.	
NOTE: You may remove the coffee pot to pour coffee at any time during the brewing process. It is recommended you do not do this longer than 30 seconds as it may cause brewed coffee to drip onto the heating base.	
8. When brewing is complete, press the Power Button to turn your Roast off.	

Setting Current Time	
1. Press the Program Button until "Clock" is illuminated on the LED display.	
2. Press Hour and Min buttons to set your current time. The coffee maker is set to military time, and your settings are from 0000 to 2359.	
3. After you have set the current time, press the Program Button again to confirm your set time.	

Programming An Automatic Brew	
1. Press the Program Button until "Timer" is illuminated on the LED display.	
2. Press Hour and Min buttons to set your desired brew time. The coffee maker is set to military time, and your settings are from 0000 to 2359.	
3. After you have set the current time, press the Program Button again to confirm your desired time.	

4. Once all settings are finalized, add coffee grounds to a coffee filter and pour your coffee machine. Fill the water tank of the Roast.
5. Press ON/OFF twice until the red LED flashes. This will indicate your Roast will brew coffee according to your set time.
6. When the set time arrives, the red and green LED indicator will light up, brewing has begun.
7. When the time you have set arrived, Coffee maker will switch on automatically and start brewing.

Canceling A Programmed Automatic Brew	
The red LED indicator light will indicate that there is a programmed automatic brew scheduled on your Roast.	
To cancel the programmed brew, press the Power Button 1 times until the LED indicator light turns off.	
This will indicate your programmed brew has been canceled and the Roast is now set to manual use.	

Pouring Hot Coffee	
Once coffee is brewed, you may pour it into another container.	
NOTE: When pouring hot coffee, make sure you are only holding the coffee pot by the stay-cool handle.	
Ensure that coffee is leaving the coffee maker from the spout to better control the flow of water.	
Replace the coffee pot on the base when not in use, and unplug the cable from the power source.	

AUTO SHUT-OFF SAFETY FEATURE	
The Roast is equipped with a safety auto shut-off feature to protect the appliance from damage in case of improper use.	
If the Roast is activated accidentally without first being filled with water, or if all the water in the Roast has evaporated during Boiling, the auto shut-off will engage and disable the heating element.	
In the event that the auto shut-off is engaged, remove the power plug from the wall outlet immediately.	
Wait 3-5 minutes until the coffee maker is sufficiently cool.	
Then proceed to refill the coffee maker and continue use.	

INSTALL THE QUIRKY APP	
Please scan the QR Code, or search for "Quirky" in the App Store or Google Play.	
Works with:	
Registration and Login	
1. Run the Quirky App from your smart phone.	
2. Register or login. The App will take you to the home page.	

Device Preparation	
Before moving forward, please ensure your Roast and your device are prepared for pairing and setup.	
• Ensure Roast has been connected to a power source.	
• Ensure your smart phone is able to connect to a WiFi network and has internet access.	
• Download and open the App on your smart phone.	
Pairing	
1. If this is the first time connecting a Quirky smart home device, you can add your first device by pressing the "Add Device" button on the home page.	
If devices are connected to your Quirky App, and you want to add a new device, press the "+" icon on the top right to connect a new device.	

2. Select the device you want to connect from the list.

3. Follow the steps as prompted by the App to finish connection. If you get stuck somewhere, start again from the beginning.
--

4. The App will show you a list of nearby WiFi networks. Select your home network, enter your password, and connect to it through the App.
If you do not see your WiFi Network on the list, press "Change Network."

5. Wait for your device to finish connecting.
6. Once your device is connected, it is ready to use.

USING ALEXA	
Please make sure that your Alexa app is connected to Amazon Echo and both work together successfully under your WiFi home network.	
1. Log in your Alexa App, tap top left corner, and tap "Skills".	
2. Find the Quirky App in the search bar and tap "Enable".	

3. Enter the account and password of your Quirky App that you created during registration or login.
4. Tap "Link Now", then tap "Authorize" on the next page to connect Alexa to Quirky.
5. Once connected, the following page will appear. Tap "Done" on the top left corner to complete connection.
6. Tap "Discover Devices" on the next page.
7. Wait a few seconds for Alexa to find and connect to your device through the Quirky App. You should see your device paired in your list of devices when this is complete.
8. You can now control your device with the Alexa App.

USING GOOGLE HOME	
PREPARATION	
• Download the Google Home app on your smart phone.	
• Register your Google Account.	
• Pair Roast with Quirky App and name it with a simple and easily recognizable name.	
• Finish setting up Google Home.	
NOTE: This device currently only supports US accounts.	
1. Open your Google Home App, select Account on the bottom right hand corner.	

2. Tap "Settings."
3. Under "Google Assistant Services," tap on "More Settings."
4. At the top, tap "Assistant"

5. Tap "Home Control"
6. Tap "+" on the bottom right hand corner of the screen.

7. Find and add the Quirky App from the search bar.
8. Enter the account and password of your Quirky App that you created during registration or login.
9. Tap "Link Now", then tap "Authorize" on the next page to connect Google Home to Quirky.

CLEANING	
1. Only clean the Roast when the power source has been disconnected.	
2. Do not use abrasive cleaning tools or harsh cleaning solutions.	
3. Do not immerse the heating base or the coffee maker's sub base in any liquid.	
4. Do not place any part of the appliance in the dishwasher.	
5. To clean the exterior, use a slightly damp, lint-free cloth or sponge.	
6. Ensure the Roast has fully dried before plugging into a power source.	

DESCALING THE COFFEE MAKER	
If you have hard water, it is recommended you decalcify your Roast coffee maker once every three months to remove build-up.	
NOTE: If you are using Roast, and it switches off before the water is fully Roasted, this is an indicator that your coffee maker needs to be decalcified.	
1. Pour any decalcifying agent into the coffee maker as you would pour water. You may also use white vinegar.	
2. Leave the coffee maker for 1 hour or following cleaning agent instructions.	
3. Pour out the liquid and wipe clean with a damp cloth.	
4. Refill with clean, filtered water.	
5. Roast the water, and empty out its contents.	
6. After using a cleaning agent, it is recommended you allow the Roast to go through several Boiling cycles with new, filtered water. Rinse the coffee maker with clean water after each Roast cycle.	

TROUBLESHOOTING	
Please find some answers to some frequently asked questions about your Roast. If these do not address any issues you may be having, please contact Quirky customer service. Contact information is located at the end of the Warranty Section of this manual.	
Q1: The Roast is won't turn on.	
A1: Ensure your Roast is connected to a working power source.	
Q2: The Roast turns off before water is fully Roasted.	
A2: You may need to decalcify your coffee maker if you are using hard water. Please refer to instructions in the "Decalcification" section.	

FCC STATEMENT	
This device complies with Part 15 of the FCC Rules.	
Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.	
The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.	
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:	
• Reorient or relocate the receiving antenna.	
• Increase the separation between the equipment and the receiver.	
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.	
• Consult the dealer or an experienced radio / TV technician for help.	

| RF WARNING STATEMENT | |
| To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 787 inches / 20 cm between the radiator and your body. | |

WARRANTY	
This product is covered by a 90-day limited warranty. For details, please contact customer service at: support@quirky.com	